

DencoSalesTechnicalServices Tech Notes.

General Laminator Maintenance

Cleaning the Body of the Laminator

1. Use a damp (water only) cloth towel to wipe clean.

Removing Adhesive Build Up

1. Remove the film from the laminator.
2. Use a damp (water only) cloth and a rubber gum eraser to remove the adhesive on the Teflon (metal) and silicone rollers.

Note: Rub firmly but do not scrub the rollers vigorously as this may scratch the surface. Do not use sharp metal objects, steel wool, or abrasives, as these may also damage the rollers.

Lubrication

1. Drive chain and sprockets should be lubricated with either a light coat of gear lube or heavy grease (lithium grease) after 5 months or 1080 hours of operation, whichever comes first.

I don't believe there is anything that should be replaced on a regular basis. For preventive maintenance the only thing besides above I would do is unplug the laminator, remove the side and back covers and make sure all is clean of dust and any debris, connections are secure on the boards, wires connections are not frayed, burnt, or close to shorting out and check for any loose screws. Check key pad buttons for wear and replace if necessary.