



# Tech Tip

What Computer Should I Get?  
Onyx Thrive 19



Click or Scan this QR code to go to Onyx's Spec Sheet



## Hardware Requirements

To keep your ONYX software working at its peak performance, please observe the following minimum requirements:

**Onyx Thrive software runs on Windows computers only.** Due to the many possible configurations of Thrive, this is only an example based on Thrive 642. Other variations will have different requirements - please consult with your Denco software specialist.

**Operating System:** Windows 10 Pro, 8.1 Pro, 8 Pro, Enterprise and Ultimate 64 Bit. Home or 32 Bit versions are not recommended.

**Processor:** Multi-Core - 6 Cores minimum, 12 or more Cores recommended

**RAM:** 24 GB Minimum, 32 GB or more recommended

**Hard Disk Space:** 250 GB for OS and product installation. One additional drive recommended for each printer. Because of increased I/O capabilities, the number of physical drives is more important than the capacity of the drives. RAID arrays are not recommended.

**Network:** It is recommended to connect directly from the RIP computer to the printer with a dedicated ethernet port, using a separate port dedicated to normal network traffic.

Remember that these are only minimum recommendations. You will get better performance if you buy a faster computer with more memory and hard drive space than the minimums recommend.

Note: Internet connection required for updates and online support.



Contact us at 888-336-8323 or send us an email at [TechSupport@DencoSales.com](mailto:TechSupport@DencoSales.com)