
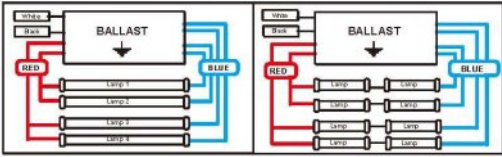
		TRA-14-1040 EP ELECTRONIC FLUORESCENT BALLAST		<small>DISCONNECT LINE VOLTAGE BEFORE INSTALLATION OR REPLACING BALLAST OR LAMPS. BALLAST CASE AND GREEN WIRE MUST BE GROUNDED.</small>		<small>CAT. NO. TRA-14-1040 EP DATE CODE DANGER HIGH VOLTAGE THIS UNIT MUST BE PROPERLY INSTALLED AND GROUNDED DANGER HAUTE TENSION CET APPAREIL DOIT ETRE CONFORMEMENT INSTALLÉ ET MIS À LA TERRE</small>	
<small>FOR USE WITH 1 TO 4 T12 HO FLUORESCENT LAMPS, SIZED UP TO 120" IN ONE SINGLE CIRCUIT; OR ANY COMBINATION OF LAMPS IN ONE CIRCUIT PROVIDED ONE FOOT IS DEDUCTED FOR EACH ADDED LAMP. 10 TO 40 FOOT FOOT TOTAL LAMP LENGTH. FOR USE WITH T12 AND T8 HO LAMPS.</small>							
<small>INSULATE EACH UNUSED LEAD SEPARATELY</small>		<small>MINIMUM STARTING TEMPERATURE -30C (-20F)</small>		<small>DATE CODE</small>			
<table border="1"> <tr> <td>NOMINA INPUT 120 VOLTS 50/60 HZ</td> <td>INPUT CURRENT 2.60 AMPS</td> <td>OUTPUT VOLTAGE 887 VOLTS</td> <td>OUTPUT VOLTAGE TO GROUND 588 VOLTS</td> </tr> </table>	NOMINA INPUT 120 VOLTS 50/60 HZ	INPUT CURRENT 2.60 AMPS	OUTPUT VOLTAGE 887 VOLTS	OUTPUT VOLTAGE TO GROUND 588 VOLTS	<small>MADE IN CHINA</small>		
NOMINA INPUT 120 VOLTS 50/60 HZ	INPUT CURRENT 2.60 AMPS	OUTPUT VOLTAGE 887 VOLTS	OUTPUT VOLTAGE TO GROUND 588 VOLTS				
<small>HIGH POWER FACTOR, THERMALLY PROTECTED, CLASS P, SOUND RATING A, NO PCB'S, PATENT PENDING, OUTDOOR TYPE 2, NON-WEATHERPROOF, TYPE "HL" HAZARDOUS LOCATION.</small>							

Transco Model: **TRA-14-1040 EP**

Case Dimensions: 15-1/4" x 3-3/16" x 2-11/16"

Mounting Holes: 15-7/8" x 2"



Approvals and Ratings:

- 1 UL935 Listed HL Hazardous Location
- 2 For use Indoors or Outdoors Type 2
- 3 Thermally Protected Class P
- 4 High Power Factor
- 5 Lite Logic Energy Efficiency Rating
- 6 For use with T-12 or T-8 High Output Fluorescent Lamps.

Electrical Specifications:

- | | |
|----------------------------|------------|
| 1 Input Voltage: | 120 V |
| 2 Input Frequency: | 50 - 60 Hz |
| 3 Input Rated Max Current: | 2.6 Amps |
| 4 Output Voltage: | 887 V |

Ballast Specifications:

- 1 For use with 1, 2, 3 or 4 T12 Fluorescent Lamps sized up to 120" in one single circuit; or any combination of Lamps in one circuit provided one foot is deducted for each additional lamp.
- 2 10-FT Minimum to 40-FT. Maximum Total Footage.
- 3 Maximum Lamp Length Not to Exceed 10-FT.

Ballast Installation Info:

- 1 Blue Wires are Output Power Leads and carry output power from the ballast to the lamp.
- 2 Twist ONE Blue Wire to both wires on the back of one socket.
- 3 Red Wires are Returns and carry output power from the lamp and back to the ballast.
- 4 Twist ONE Red Wire to both wires on the back of the 2nd Socket. A red wire can be attached to as many as THREE sockets.

Service and Replacement Info:

- 1 The EP ballast cuts power to a circuit as soon as that lamp circuit is broken. (i.e.: If a lamp is removed, 0 volts will be read at both sockets when the power is on.)
- 2 If a lamp has been replaced and the new lamp fails to light but all other lamps wired to this same ballast are lit, proceed in the following manner:
 1. Test lamp filament by checking ohms across (unpowered) lamp pins with a digital AC volt meter to insure lamp is not defective. If continuity is present proceed to next step.
 2. Physically inspect wire nuts and be sure that wires are properly covered, connected, & no shorts are present. Correct any issues including any resulting from water.
 3. Unhook Blue Power Lead and attach an unused blue power lead if available.
 4. If no unused Blue Power Lead is available, Replace ballast.